

GENIUS PLUS

DOUBLE LINEAR
IMAGING TECHNOLOGY

PIR SENSOR



ELECTRONIC ENGINEERING LTD.

INSTALLATION INSTRUCTIONS
P/N: 7101329 Rev. G A.Y.

GENERAL DESCRIPTION

This DOUBLE QUAD ELEMENT PIR detector is based on the latest "ASIC" (Application Specific Integrated Chip) and SMD technologies. The GENIUS PLUS monitors the environment by analyzing the conditions and adapts to it constantly. If conditions change, the GENIUS PLUS adapts it maintaining sensitivity levels and detection capability.

By using DOUBLE QUAD Optic Systems with a diagonally opposed configuration (phase shift discrimination), the GENIUS PLUS is able to achieve a three dimensional thermal image of the protected area. It stores this image and refers to it determine intrusions.

During the standby mode (no LED indications) the GENIUS PLUS constantly monitors the protected area, updating and reconfiguring itself as conditions change.

GENIUS PLUS FEATURES

- Double Quad Linear Imaging Technology for sharp analysis of body dimensions and differentiation from background and animals.
- Immunity to animals up to 5kg (11 lbs).
- High RF and EM Immunity.
- Environmental immunity.
- 15m (49.2 ft) Detection Range with Wide Angle Lens
- Temperature compensation.
- Compact Design for Residential Installation
- Variable pulse width adjustment.
- Sensitivity adjustment.
- Height installation calibrations free from 1.8m (5.9 ft) to 2.7m (8.9 ft).

MOUNTING LOCATION


Choose a location most likely to intercept an intruder. See the detection patterns in Fig. 5. The twin dual element high quality sensors detect motion across the beam field; they are slightly less sensitive to motion towards the detector.

While the GENIUS PLUS is capable of detecting intrusions under exceedingly difficult conditions, it is recommended to avoid the following locations:

- Areas where sunlight may shine directly onto the PIR (lens).
- Facing surfaces that may change temperature extremely rapidly.
- Areas with extreme airflows.

NOTE: Recommended installation height – 2.4m (7.9ft).

FIG. 1 – REMOVAL THE FRONT COVER

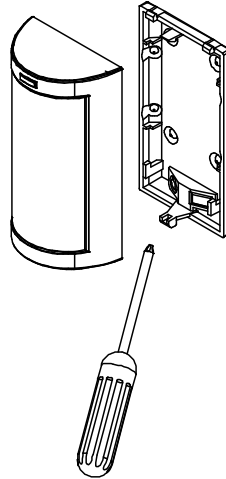

MOUNTING THE DETECTOR

A variety of mounting positions is possible with the standard GENIUS PLUS housing.

1. Open the front cover by pushing with screwdriver the holding pin at the middle of its lower surface and lifting upwards.
2. Snap out the detector PCB.
3. The GENIUS PLUS housing can be mounted in a variety of ways. The circular indentations in the housing indicate mounting holes to be punched out in accordance with the desired mounting position:
4. For surface mounting punch out the 4 indentations marked " B " (see Fig. 2).
5. For Corner mounting gives 45° angle on either the right or the left side. Punch out the indentations marked " C " (see Fig. 2)

6. The circular and rectangular indentations at the bottom base are the knockout hole for wire entry. You may also use mounting holes that are not in use for running the wiring into the detector.


7. To close the front cover, insert the two small prongs along its upper edge into their corresponding slots in the upper edge of the base. Insert the larger prong at the bottom of the front housing into the slot at the bottom of the base by exerting slight pressure on the prong. The front cover should now fit snugly into the base.

For detector installation it is recommended to use set of screws and plastic anchors supplied with the detector.

CAUTION: using different or bigger screws can damage the electronic board.


FIG. 2 - OPTIONAL HOLES

The plastic base include different types of knockdown holes:

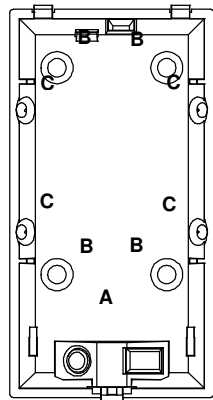

- A. Wire access holes
- B. Use for flat wall mounting
- C. Corner mounting - use all 4 holes.

FIG. 3 - TERMINAL BLOCK CONNECTIONS

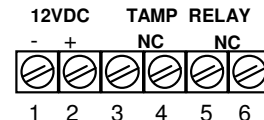

Terminal 1 - Marked " - " (gnd)
Connect to ground of the control panel.

Terminal 2 - Marked " + " (+12V)
Connect to a positive Voltage output of 8.2 -16Vdc source (usually from the alarm control unit)

Terminals 3 & 4 - Marked " TAMPER "
If a Tamper function is required connect these terminals to a 24-hour normally closed protective zone in the control unit. If the front cover of the detector is opened, an immediate alarm signal will be sent to the control unit.

Terminals 5 & 6 - Marked " RELAY "
These are the output relay contacts of the detector. Connect to a normally closed zone in the control panel.

FIG. 4 – GENIUS PLUS PCB LAYOUT


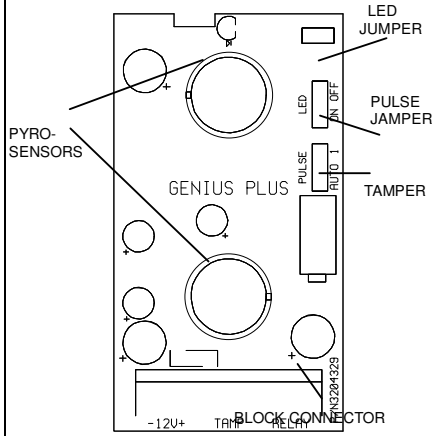


FIG. 5 – WIDE ANGLE LENS PATTERN

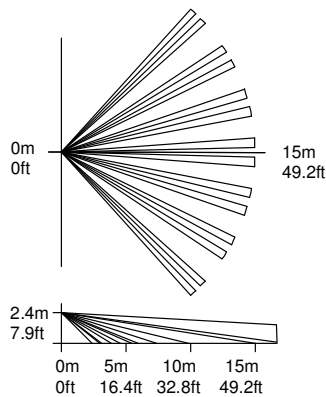


TECHNICAL SPECIFICATIONS

Power input	8.2 - 16VDC
Current consumption	
Standby	13mA at 12VDC
Active	8.5mA at 12VDC
Detection speed	0.15 to 1.8m/sec (0.5 to 6 ft./sec)
Alarm output	N.C 50mA at 24VDC 27ohm in line resistor
Tamper switch	N.C 50mA at 24VDC 10ohm in line resistor
Operating temperature	-20°C to 50°C (-4°F to 122°F)
Operating humidity	Up to 95% (non-condensing)
Storage temperature	-40°C to 80°C (-40°F to 176°F)
Detection method	2 matching dual element with double optic system
RFI protection	>30V/m at 10 to 1000MHz
EMI immunity	50,000Volt electrical
interference	due to power surges or lighting
LED Indicator	LED is blinking 8 time during warm up period and self testing 12 Sec. LED is ON during alarm.
Dimensions	88 x 48 x 33mm (3.46" x 1.9" x 1.3")
Weight	53 gr. (1.9 oz.)

CROW reserves the rights to change specifications without prior notice

JUMPER SWITCHES SETTING

Pulse Jumper - Provides control for normal or high risk operating environments without air drafts.




The GENIUS PLUS will automatically select the appropriate pulse count level according to the strength of the incoming signals.

This setting is for operation in a harsh environment with air drafts or with a small animal less than 25cm (0.8ft) in height and less than 5kg (11.02lbs).

In AUTO mode, the GENIUS PLUS will increase its sampling rate and take more factors into account.

LED Jumper – LED control selection



LED ENABLE - The LED will light when the GENIUS PLUS is in alarm condition.

LED DISABLE - The LED is disabled.

WA LENS PATTERN

COVERAGE	WIDE ANGLE
	90°
	15m x 22m
	49.2ft x 72.2ft

TOTAL DETECTION ZONES	42
-----------------------	----

IMPORTANT:

- In an environment with a small animal:
1. The GENIUS PLUS has to be mounted at 2.4m (7ft.) or higher (max 2.7m or 7.9ft.) above floor level.
 2. Install the GENIUS PLUS vertically (not tilted forward).
 3. Away from furniture 2.4m (7.9ft.) or more, on which a small animal may jump.
 4. Not facing a staircase, ladder or similar object which can be part of the monitored environment (the vertical motion of the animal may be interpreted by the detector as an actual intruder).
 5. Flip jumper switch "PULSE" to the "AUTO" (down) position for a harsh environment.

CROW ELECTRONIC ENGINEERING LTD. ("Crow") – WARRANTY POLICY CERTIFICATE

This Warranty Certificate is given in favor of the purchaser (hereunder the "Purchaser") purchasing the products directly from Crow or from its authorized distributor. Crow warrants these products to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the last day of the week and year whose numbers are printed on the printed circuit board inside these products (hereunder the "Warranty Period").

Subject to the provisions of this Warranty Certificate, during the Warranty Period, Crow undertakes, at its sole discretion and subject to Crow's procedures, as such procedures are from time to time, to repair or replace, free of charge for materials and/or labor, products proved to be defective in materials or workmanship under normal use and service. Repaired products shall be warranted for the remainder of the original Warranty Period.

All transportation costs and in-transit risk of loss or damage related, directly or indirectly, to products returned to Crow for repair or replacement shall be borne solely by the Purchaser.

Crow's warranty under this Warranty Certificate does not cover products that are defective (or shall become defective) due to: (a) alteration of the products (or any part thereof) by anyone other than Crow; (b) accident, abuse, negligence, or improper maintenance; (c) failure caused by a product which Crow did not provide; (d) failure caused by software or hardware which Crow did not provide; (e) use or storage other than in accordance with Crow's specified operating and storage instructions.

There are no warranties, expressed or implied, of merchantability or fitness of the products for a particular purpose or otherwise, which extend beyond the description on the face hereof.

This limited Warranty Certificate is the Purchaser's sole and exclusive remedy against Crow and Crow's sole and exclusive liability toward the Purchaser in connection with the products, including without limitation - for defects or malfunctions of the products. This Warranty Certificate replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise. In no case shall Crow be liable to anyone for any consequential or incidental damages (inclusive of loss of profit, and whether occasioned by negligence of the Crow or any third party on its behalf) for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever. Crow does not represent that these products can not be compromised or circumvented; that these products will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that these products will in all cases provide adequate warning or protection.

Purchaser understands that properly installed and maintained product may in some cases reduce the risk of burglary, fire, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will not be personal injury or property loss or damage as a result.


Consequently, Crow shall have no liability for any personal injury, property damage or any other loss based on claim that these products failed to give any warning.

If Crow is held liable, whether directly or indirectly, for any loss or damage with regards to these products, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of these products, which shall be the complete and exclusive remedy against Crow.

WIRE SIZE REQUIREMENTS

Use #22 AWG (0.5 mm) or wires with a larger diameter. Use the following table to determine required wire gauge (diameter) and length of wire between the detector and the control panel.

Wire Length	m	200	300	400	800
Wire Diameter	mm	.5	.75	1.0	1.5
Wire Length	ft.	800	1200	2000	3400
Wire Gauge	#	22	20	18	16

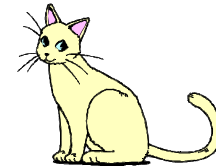

The GENIUS PLUS provides PET immunity up to 5Kg (11.02 lbs).

TEST PROCEDURES

WAIT ONE MINUTE WARM-UP TIME AFTER APPLYING 12 VDC POWER. CONDUCT TESTING WITH THE PROTECTED AREA CLEARED OF ALL PEOPLE.

Walk test

- Remove front cover.
The pulse jumper must be in position 1. The LED must be enabled.
- Replace the front cover.
- Start walking slowly across the detection zone.
- Observe that the detector's LED lights whenever motion is detected.
- Allow 5 sec. between each test for the detector to stabilize.
- After the walk test is completed, the LED may be disabled.

NOTE:

walk tests should be conducted, at least once a year, to confirm proper operation and coverage of the detector.

CROW ELECTRONIC ENGINEERING LTD.

ISRAEL: 57 Hamelacha St., Holon 58855
Tel: 972-3-5569937 / 8 / 9
Fax: 972-3-5592981
E-mail: support@crow.co.il

USA: 2160 North Central Road,
Fort Lee, N.J. 07024
Tel: 1-800-GET CROW
or (201) 944 0005
Fax: (201) 944 1199
E-mail: support@crowe.com

AUSTRALIA: 429 Nepean HWY Brighton East Vic 3187
Tel: 61-3-9596 7222
Fax: 61-3-9596 0888
E-mail: crows@crowe.com.au

POLAND: VIDICON SP. ZO. O.
15 Povázkowska St.
01 - 797 Warsaw Poland
Tel: 48 22 562 3000
Fax: 48 22 562 3003
E-mail: vidicon@vidicon.pl

LATIN AMERICA: CROW LATIN AMERICA
5753 NW 151ST Street
MIAMI LAKES,
FL 33014 - USA
Tel: +1-305-823-8700
Fax: +1-305-823-8711
E-mail: sales@crowlatinamerica.com

ITALY:

DEATRONIC
VIA Giulianello 4/14
00178 ROMA, ITALY
Tel: +39-06-76-12912
Fax: +39-06-76-12601
E-mail: info@deatronic.com

These instructions supersede all previous issues in circulation prior to February 2005.